

Activation and registration of Ultranalysis suite

Content:

[Serial number](#)

[Hardware code](#)

[Registration](#)

[Activation](#)

Serial number

You previously received your serial number by e-mail:

Dear,

A serial number has been generated:

Company: My Company

Customer: John Mouser

Serial number: 123456789

License Type: Update

Support: 6 months setup support (free)


Due date: January 13, 2011

Goto www.sdt.be/license/OpenOffice/Activation.php to apply for your license number.

Standard e-mail of serial number attribution

During the first launching of the Ultranalysis suite, the following license window opens automatically.

If you are using the trial version of the software, use the menu **Help / License set up**.

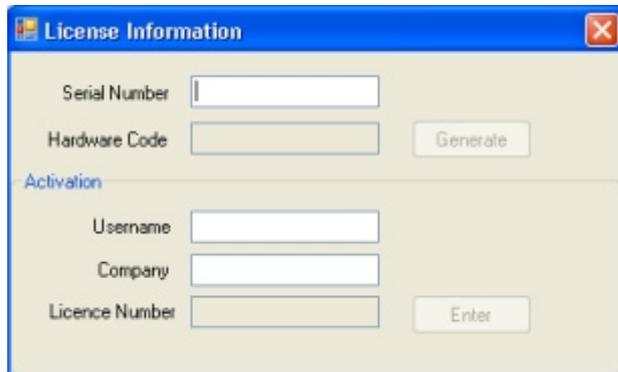


License information window

Encode your serial number in the corresponding field.

Hardware code

Generate your hardware code by clicking on the button "**Generate**":

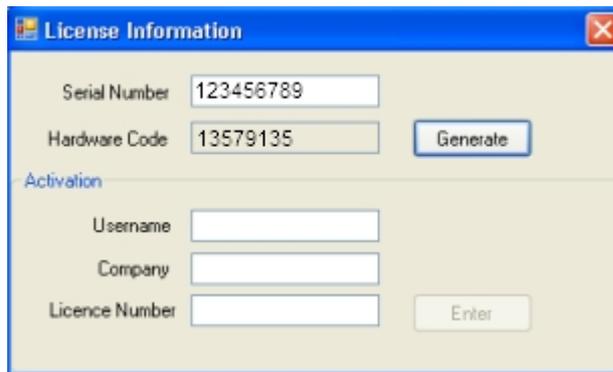


The screenshot shows a window titled "License Information". It contains a "Serial Number" field with the value "123456789" and a "Hardware Code" field with the value "13579135". A "Generate" button is located to the right of the Hardware Code field. Below this, under the heading "Activation", there are three input fields: "Username", "Company", and "Licence Number". An "Enter" button is positioned to the right of the "Licence Number" field.

The hardware code has been generated

Registration of Ultranalysis Suite

Visit our server at the address www.sdt.be/license/OpenOffice/Activation.php.

Encode your serial number in the corresponding field and then click "**Request**":

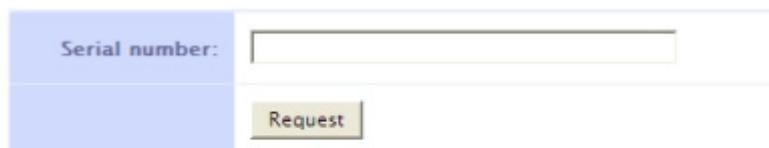

The screenshot shows a form with a label "Serial number:" followed by an empty text input field. Below the input field is a button labeled "Request".

[Retry](#)

Type your serial number

The server asks you to confirm your coordinates:



The screenshot shows a confirmation form. On the right, it says "This serial number is licensed to:" followed by "Company: My Company", "Name: John Mouser", "Address:", "Address:", "State: None", and "Country: Belgium". Below this is a checked checkbox next to the text "I have validated my information:", an empty "PC Hardware code:" field, and a "Validate" button.

[Retry](#)

If information is correct, tick the box "**I have validated my information:**", type your hardware code in the corresponding field and click "**Validate**". The system send you by e-mail your license number.

If information is incorrect, please contact your local dealer or SDT International.

Dear .


Company: My Company
Customer: John Mouser

Serial number: 123456789
Update license: 024680246

Standard e-mail of license number attribution

Activation of Ultranalysis Suite

Come back to the license window of Ultranalysis Suite, type your license number in the regarding field and click "**Enter**". You can also add your user and company names:

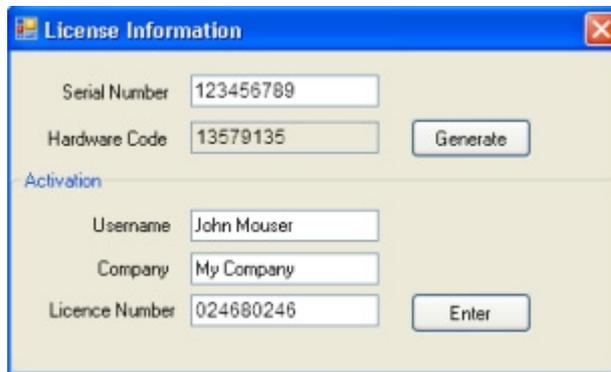


The screenshot shows a 'License Information' dialog box with the following fields and buttons:

- Serial Number: 123456789
- Hardware Code: 13579135 (with a 'Generate' button next to it)
- Activation section:
 - Username: John Mouser
 - Company: My Company
 - Licence Number: 024680246 (with an 'Enter' button next to it)

Type the license number, your user and company names

The application confirms your activation is successfully completed:

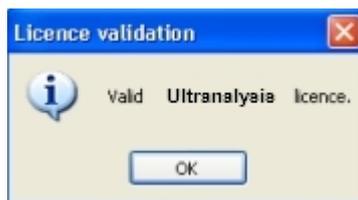

You are ready to use Ultranalysis Suite.