

Installation of Updater application

Content

- [Introduction](#)
- [Installation from the CD-Rom](#)
- [Online installation](#)
- [Setup](#)

Introduction

The Updater application is a tool needed to update and upgrade your SDT270 SS or SB, in case you don't have Ultranalysis Suite or DataDump.

Installation

Installation from CD-Rom


Run the CD-Rom delivered with your equipment. after choosing the language, from the main page, select "**Other**" and then "**Install Updater Software**". To continue the installation, please turn to the chapter "**Setup**".

Online installation


Visit SDT ftp site, at the address <ftp://ftp.sdt.be/pub/Software/SDT270Updater>. Select the directory "**Latest version**" and then double click on the file "**SDT270UpdaterSetup.msi**".

Setup


You should now see the following screen:

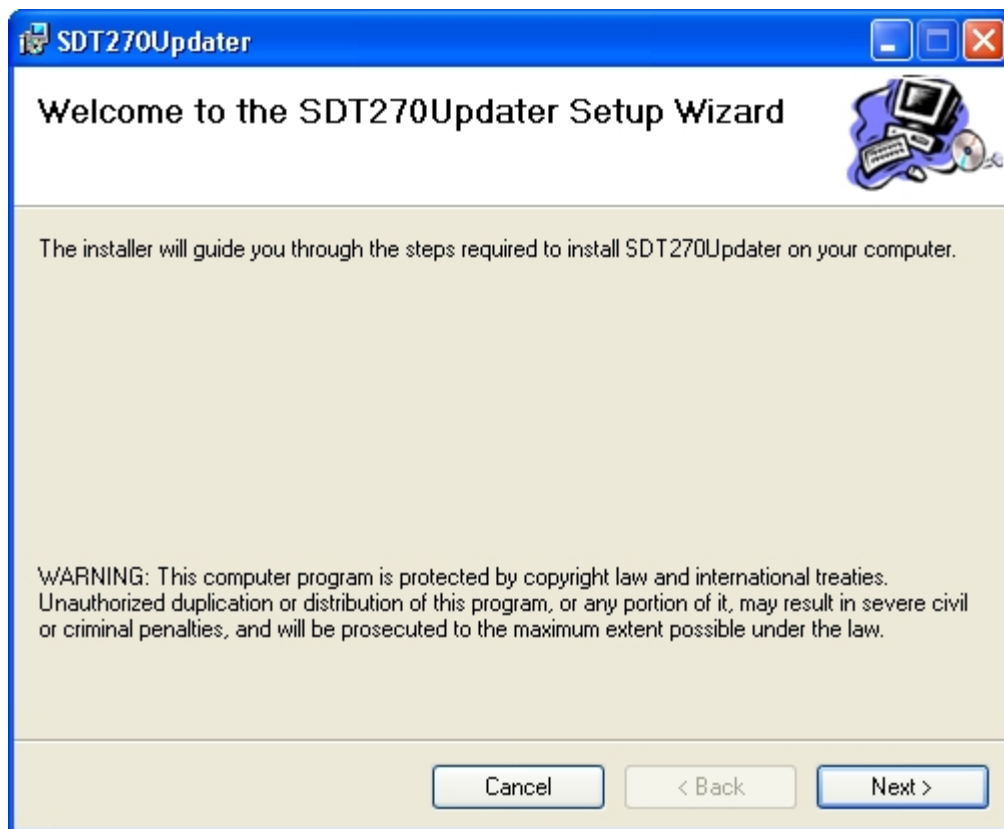

Click "**Next**". The following screen appears:

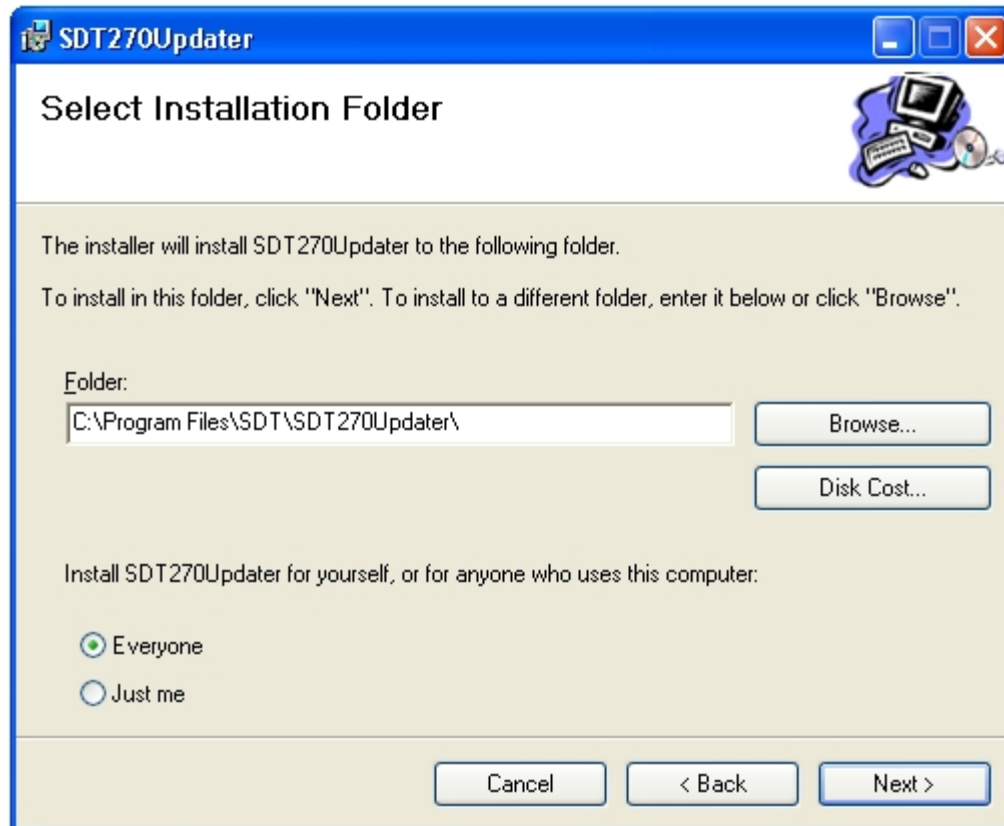

By default, the SDT270Updater software will be installed in the folder C:\Program Files\SDT\SDT270Updater. You can specify a different location at your convenience by clicking "**Browse**". Click "**Next**". The following screen appears:

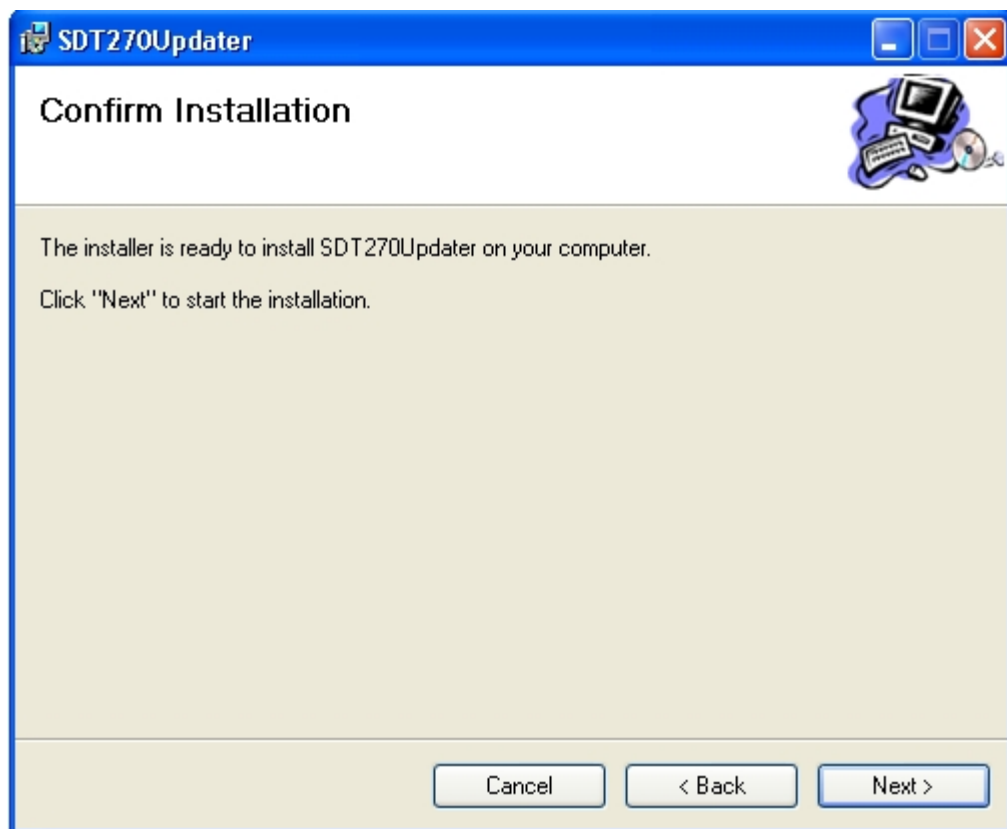

A new screen confirms the software is installed. Click "**Close**" to complete the setup.
